

DMX CHANNELS

Mode/Channel			Function	Values	Description
M1	M2	M3			
1	1	1	Pan	0-255	0%-100%
		2	Pan fine	0-255	0%-100%
2	2	3	Tilt	0-255	0%-100%
		4	Tilt fine	0-255	0%-100%
	3	5	Pan&Tilt speed	0-225	Pan&Tilt Speed from fast to slow
				226-235	Black out (Pan/Tilt movement)
				236-245	Black out (Gobo/Color change)
				246-255	No function
3	4	6	Dimmer	0-9	Closed
				10-255	Dimmer from 0%-100%
				0-31	No function(Black)
				32-63	Open
				64-95	Strobe from slow to fast
4	5	7	Strobe	96-127	Open
				128-143	Strobe from slow to fast
				144-159	Strobe from fast to slow
				160-191	Open
				192-223	Random strobe from slow to fast
				224-255	Open
5	6	8	Color Wheel 7+1	0-10	White
				11-23	Color 1
				24-36	Color 1 + Color 2
				37-49	Color 2
				50-62	Color 2 + Color 3
				63-75	Color 3
				76-88	Color 3 + Color 4
				89-101	Color 4
				102-114	Color 4 + Color 5
				115-127	Color 5
				128-140	Color 5 + Color 6
				141-153	Color 6
				154-166	Color 6 + Color 7
			167-179	Color 7	
			180-217	Color forward rotation from slow to fast	
			218-255	Color backward rotation from slow to fast	
6	7	9	Gobo Wheel	0-10	White
				11-25	Gobo 1

DMX CHANNELS

6	7	9	Gobo wheel 8+1	26-40	Gobo 2
				41-55	Gobo 3
				56-70	Gobo 4
				71-85	Gobo 5
				86-100	Gobo 6
				101-115	Gobo 7
				116-130	Gobo 8
				131-140	Shake from slow to fast: gobo 1
				141-150	Shake from slow to fast: gobo 2
				151-160	Shake from slow to fast: gobo 3
				161-170	Shake from slow to fast: gobo 4
				171-180	Shake from slow to fast: gobo 5
				181-190	Shake from slow to fast: gobo 6
				191-200	Shake from slow to fast: gobo 7
				201-210	Shake from slow to fast: gobo 8
7	8	10	Rotation gobo wheel	211-232	Rotation from fast to slow
				233-255	Rotation from slow to fast
				0-10	White
				11-40	Gobo 1
				41-70	Gobo 2
				71-100	Gobo 3
				101-130	Gobo 4
				131-160	Gobo 5
				161-190	Gobo 6
8	9	11	Gobo rotation	191-222	Rotation from fast to slow
				223-255	Rotation from slow to fast
				0-127	Position indel 0-540 angle degree
				128-190	Rotation from fast to slow
9	10	12	Prism	191-192	Stop
				193-255	Rotation from slow to fast
10	11	13	Prism rotation	0-127	Prism excluded
				128-255	Prism inserted
				0-127	Position indel 0-540 angle degree
				128-190	Rotation from fast to slow
11	12	14	Focus	191-192	Stop
				193-255	Rotation from slow to fast
				0-255	0%-100%
12	13	15	Function (>3sec)	0-24	Empty
				25-49	Reset:effects

DMX CHANNELS

12	13	15	Function (>3sc)	50-74	Empty
				75-99	Reset:effects
				100-124	Empty
				125-149	Reset:sound control
				150-174	Empty
				175-199	Lamp off
				200-224	Empty
				25-255	Lamp on